
UPDATE DELL SERVER FIRMWARE THROUGH IKVM AND USB DRIVE


PREPARED BY TRACY

1) Login server ikvm page and look on server information to find out the current firmware used in particular server.

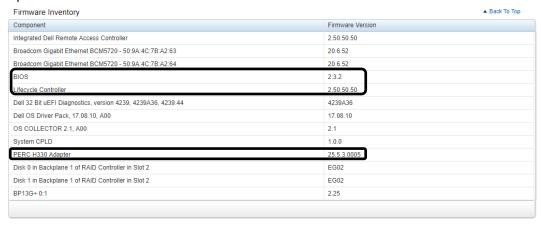


2) Search latest firmware at Dell official website:


http://www.dell.com/support/home/us/en/19/products/?istag=false&isinvalidselection=tru

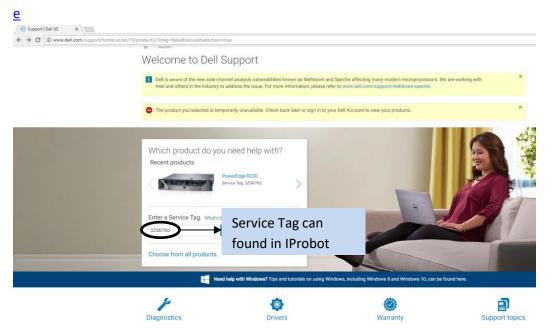


3) Search for drivers & downloads section and choose for Not Applicable.

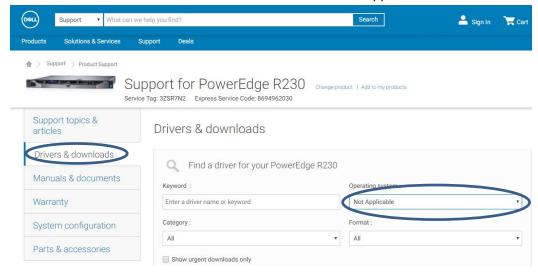


4) Search for BIOS/Lifecycle controller/Raid Controller firmware

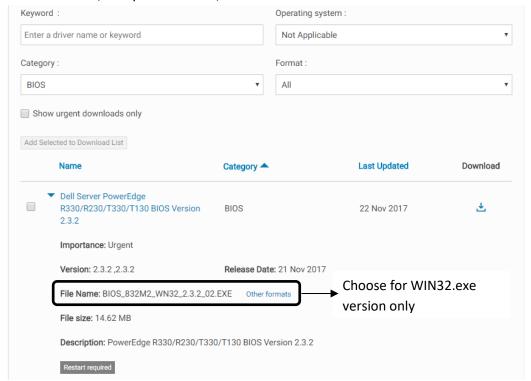

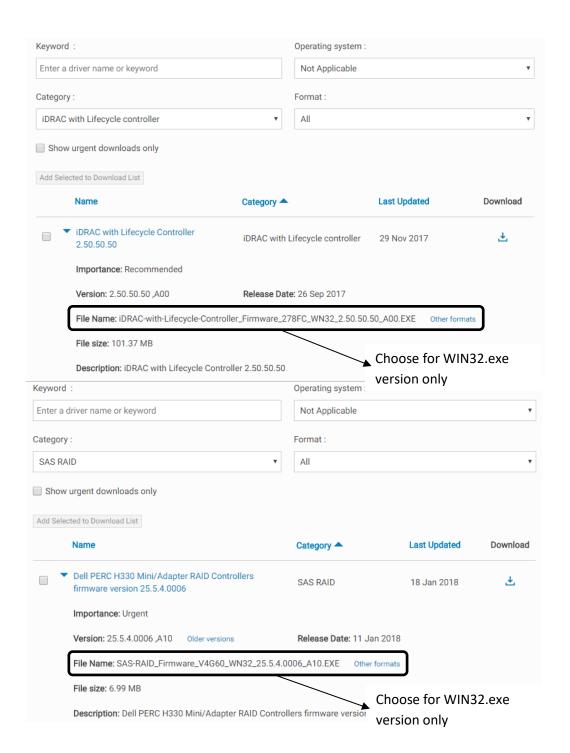

UPDATE FIRMWARE BY USING IKVM

1) Choose Update and Rollback

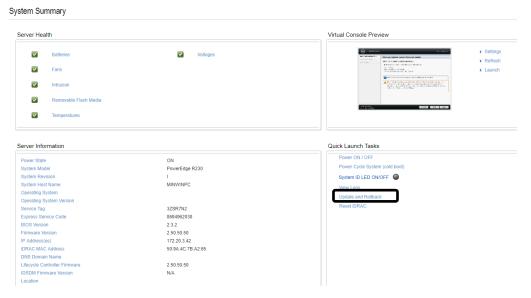


2) Choose your file path >> upload




3) Choose Install and Reboot


Firmware Update

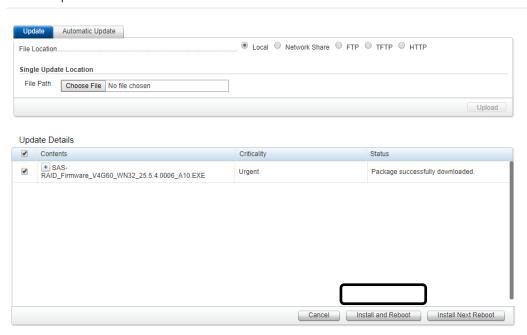

4) You may go Job Queue to verify update process.

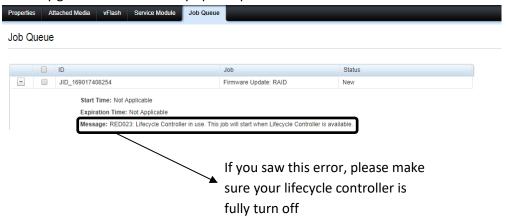

5) When you saw this message, mean the update process is running.

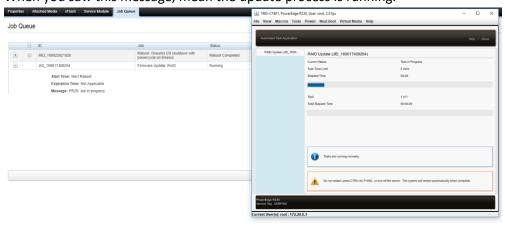


6) Completed

Job Queue



7) Verification

Firmware Inventory

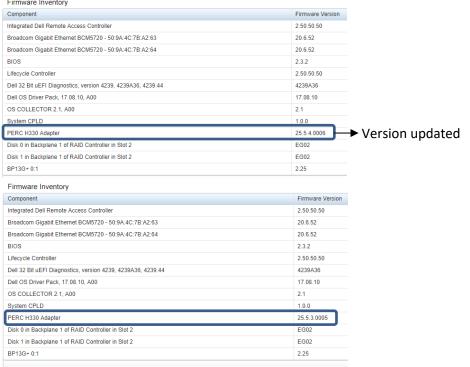


UPDATE FIRMWARE BY USING LIFECYCLE CONTROLLER BY USING USB DRIVE


1) Press F10 for connecting LifeCycle Controller




2) Access to Firmware Update >> Launch Firmware Update

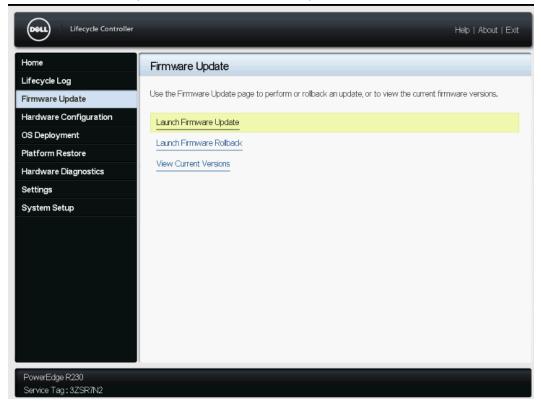


3) Map your USB Drive using virtual Media from your own PC or physically plug in USB drive into server. You may skip the step of Map Removable Disk if you are physically plug in USB drive into server.

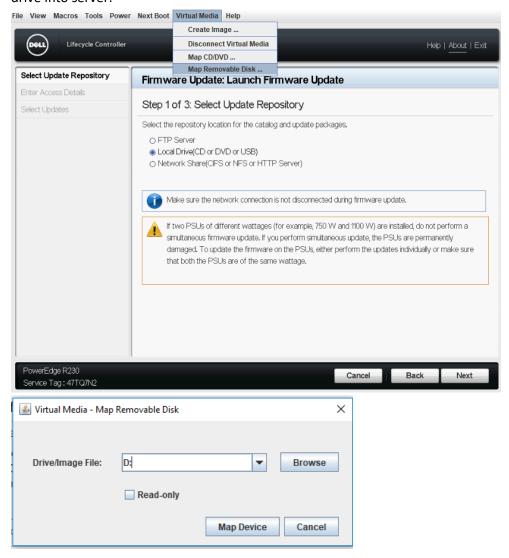


4) Choose Local Drive >> Next >> Choose your Local Drive

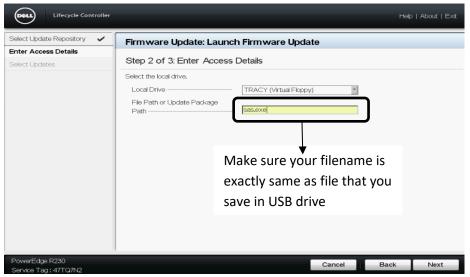

5) Select Updates and Apply

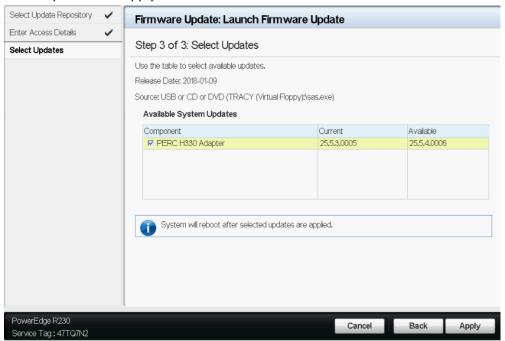

6) Update process

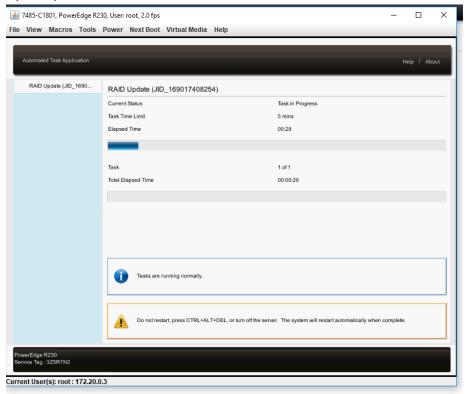

7) Completed and verify the version is updated.