


## Supermicro Server Change ikvm Password

Step 1: Download Rufus.exe

In order to make your USB flash drive as DOS version, please download Rufus.exe to create USB flash drive as a dos bootable drive.

Link: <https://rufus.akeo.ie/>


Step 2: Make USB flash drive as DOS version

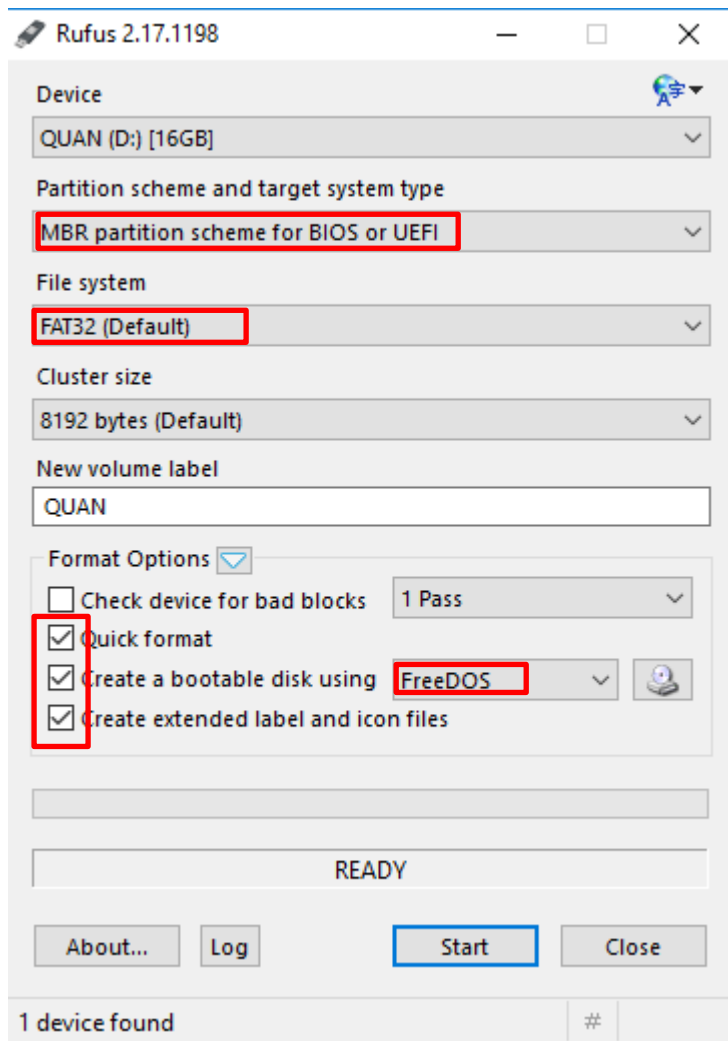

Make sure all of this field is correct choose and tick.

Step 3: Place your ikvmreset DOS folder into USB drive

Step 4: Make USB drive as first boot order on server.

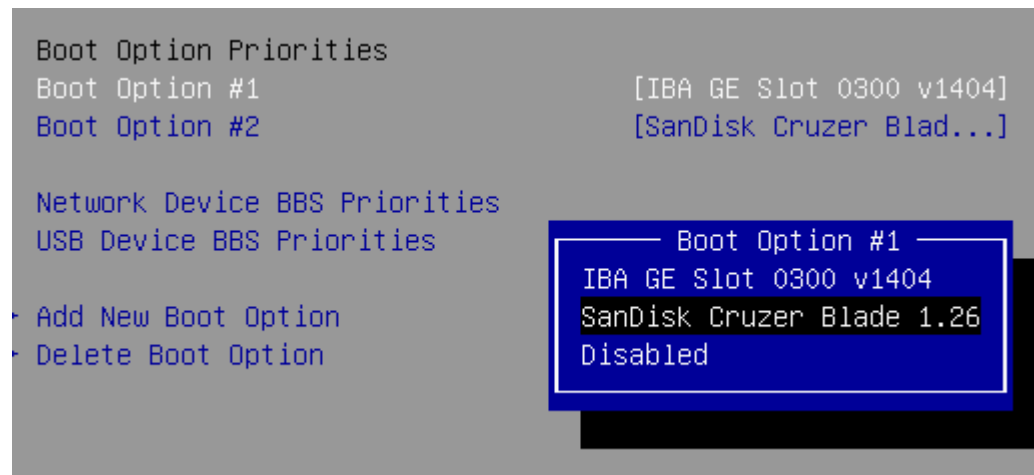

Step 5: Reset ikvm password by factory default

```
C:\IPMICF~1.170\DOS>ipmicfg -fd
Reset to the factory default completed.
C:\IPMICF~1.170\DOS>
```

Step 6: Change ikvm password

```
C:\IPMICF~1.170\DOS>ipmicfg -user list
Maximum number of Users : 10
Count of currently enabled Users : 2
User ID | User Name | Privilege Level | Enable
----- | -
2 | ADMIN | Administrator | Yes
C:\IPMICF~1.170\DOS>ipmicfg -user setpwd 2 ADMIN
Done.
C:\IPMICF~1.170\DOS>_
```

*ipmicfg -user setpwd <user\_id> <password>*