


# SERVER FULL CONFIGURATION

Compatible with DELL R230 R430 R440 R730 R740

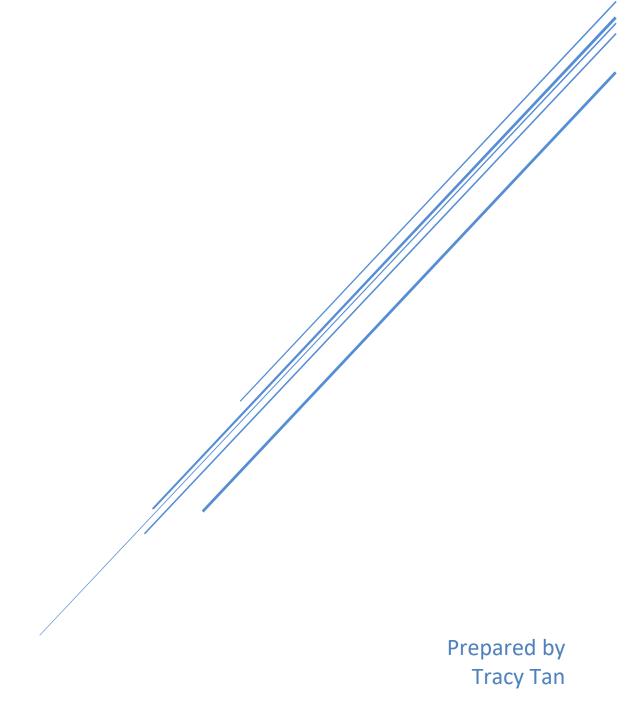


## Contents


2	SERVER FULL CONFIGURATION - DELL
8	UPDATE DELL SERVER FIRMWARE THROUGH IKVM AND USB DRIVE
11	UPDATE FIRMWARE BY USING IKVM
14	UPDATE FIRMWARE BY USING LIFECYCLE CONTROLLER BY USING USB DRIVE

## **SERVER FULL CONFIGURATION - DELL**


1) Enter to system setup/bios page >> choose System Bios >> choose Default

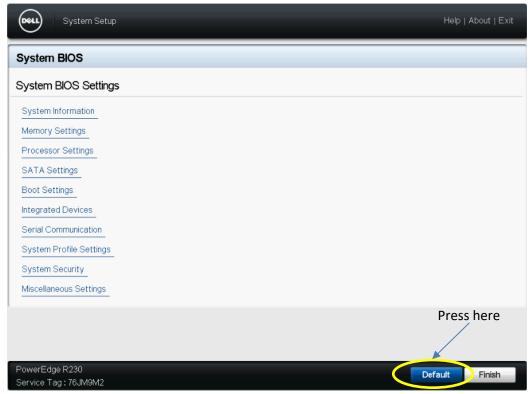

2) System Profile Settings >> System Profile >> Performance

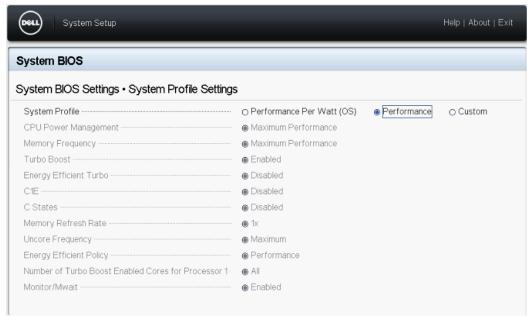

## 3) Go to iDRAC Settings >> User Configuration >> Password must set to default

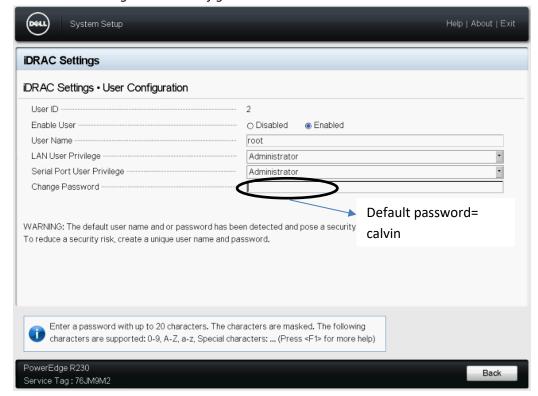


### 4) Back to iDRAC Settings >> Network




## 5) Enable DHCP




#### 6) Enable IPMI Over LAN

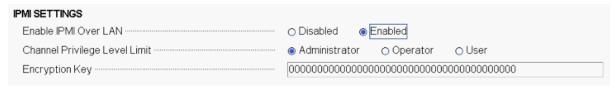

7) Configure RAID 1 in Raid Controller

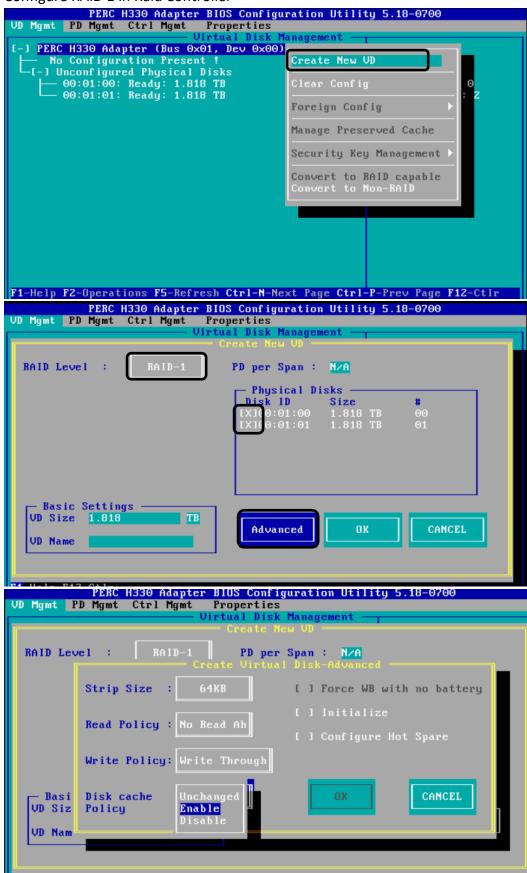


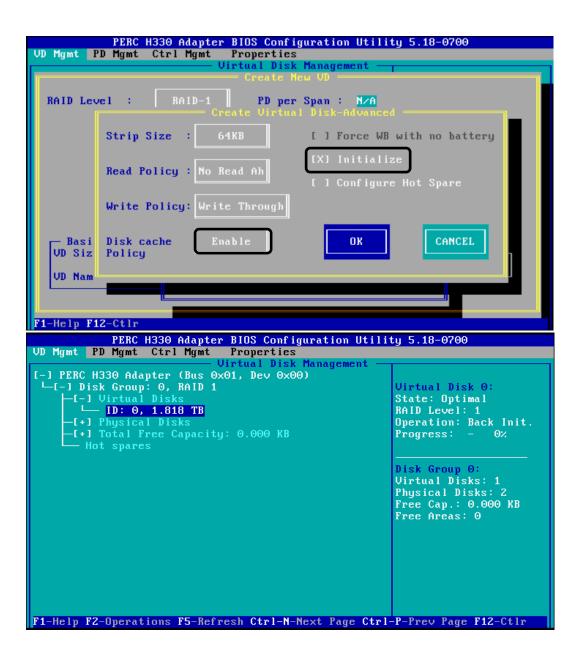


8) Login to iKVM >> after successfully login please log out again.



9) After received email from DHCP server, login into IProbot and update password.

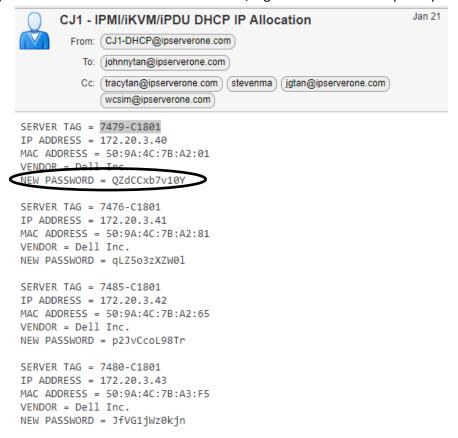


10) Login into iKVM and verify the IP had change to static IP.

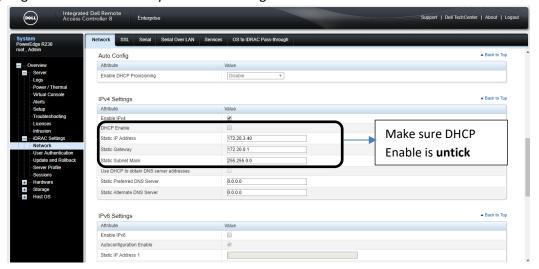


## UPDATE DELL SERVER FIRMWARE THROUGH IKVM AND USB DRIVE

1) Login server ikvm page and look on server information to find out the current firmware used in particular server.

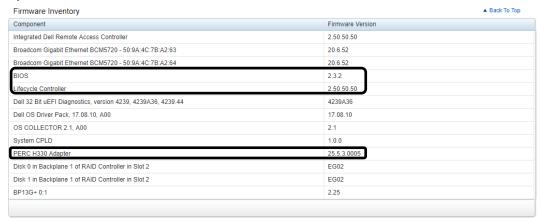


2) Search latest firmware at Dell official website:


http://www.dell.com/support/home/us/en/19/products/?istag=false&isinvalidselection=tru

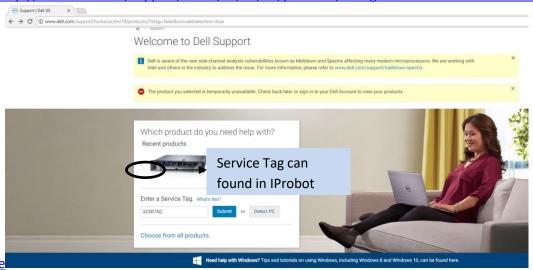


3) Search for drivers & downloads section and choose for Not Applicable.

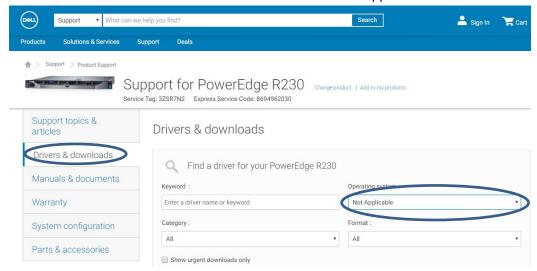


4) Search for BIOS/Lifecycle controller/Raid Controller firmware

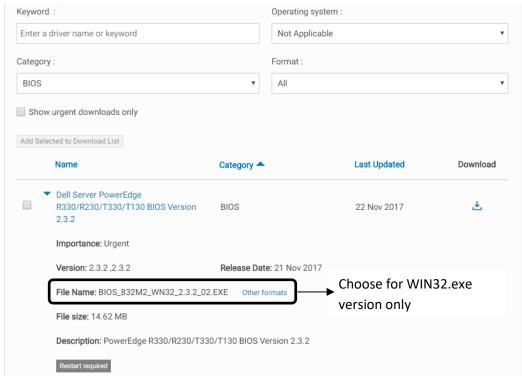

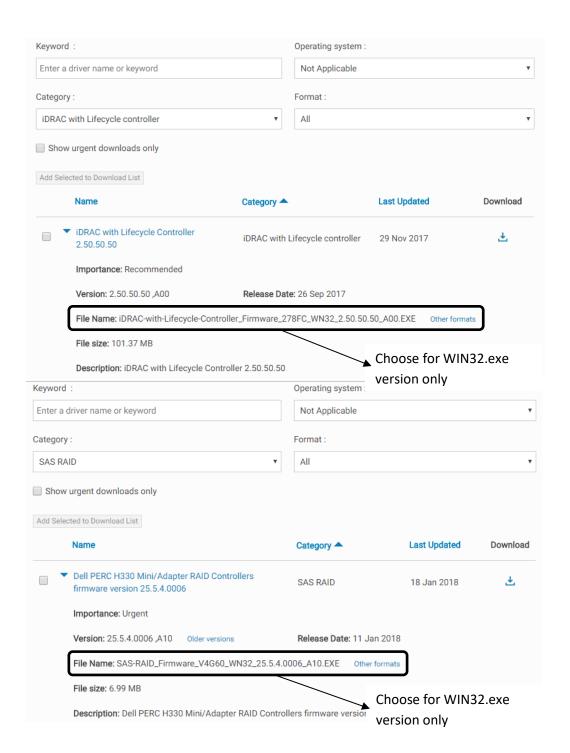

## **UPDATE FIRMWARE BY USING IKVM**

1) Choose Update and Rollback

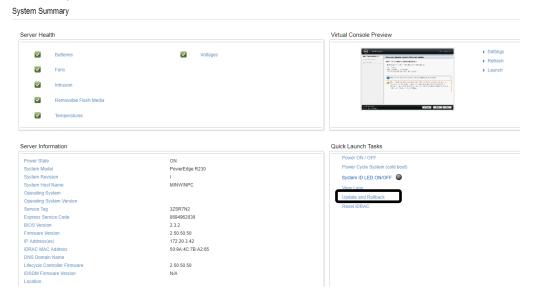


2) Choose your file path >> upload




## 3) Choose Install and Reboot


Firmware Update

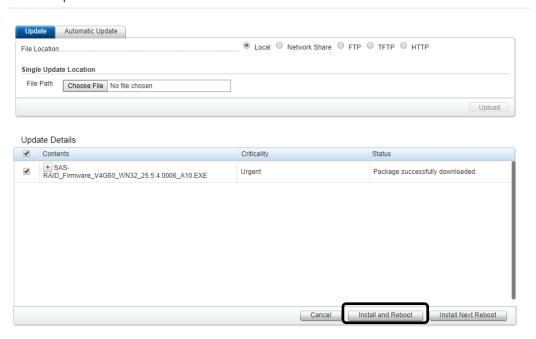

4) You may go Job Queue to verify update process.

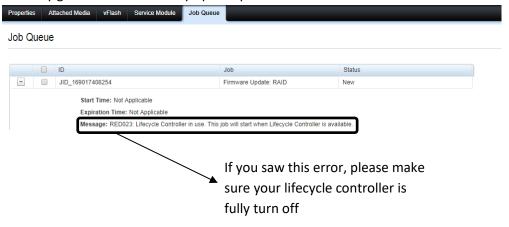


5) When you saw this message, mean the update process is running.

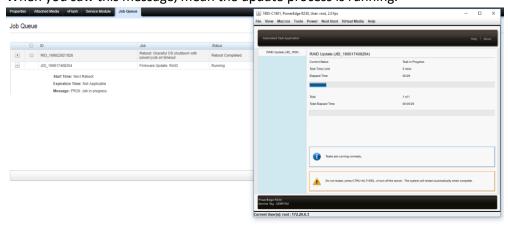


## 6) Completed

### Job Queue

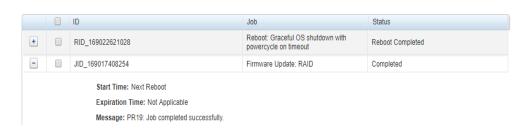

## 7) Verification

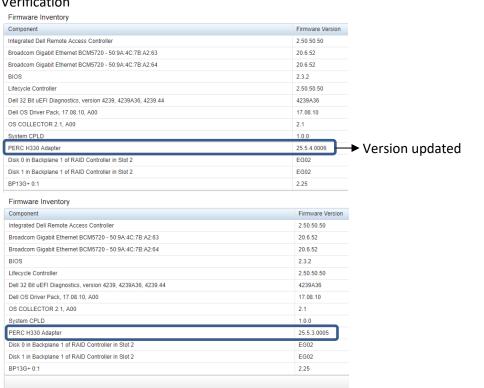


## UPDATE FIRMWARE BY USING LIFECYCLE CONTROLLER BY USING USB DRIVE


1) Press F10 for connecting LifeCycle Controller




2) Access to Firmware Update >> Launch Firmware Update

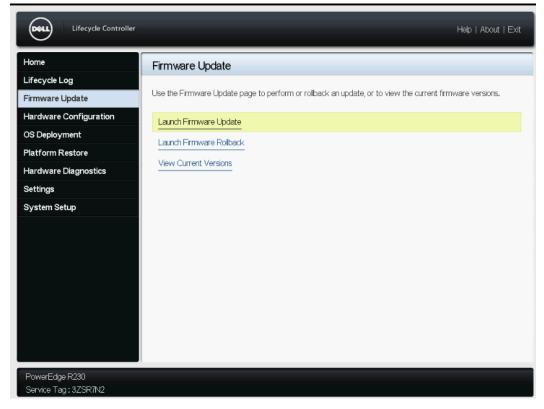


3) Map your USB Drive using virtual Media from your own PC or physically plug in USB drive into server. You may skip the step of Map Removable Disk if you are physically plug in USB drive into server.

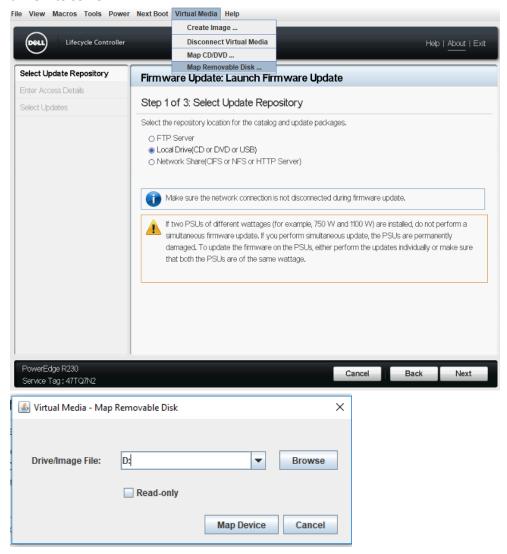


4) Choose Local Drive >> Next >> Choose your Local Drive

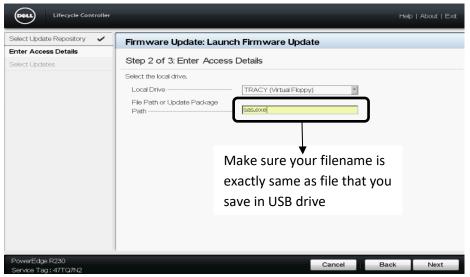

5) Select Updates and Apply

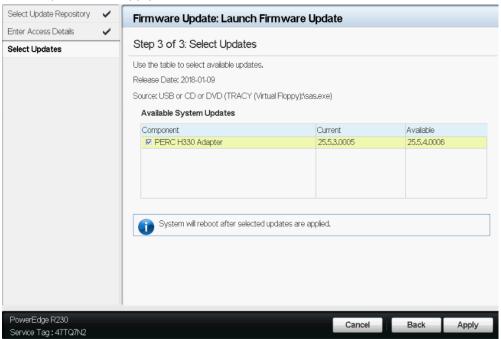

6) Update process

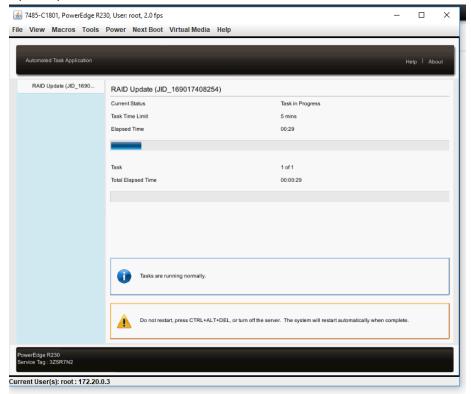

7) Completed and verify the version is updated.