




*Trusted . Reliable . Secured Hosting Provider*

# SWITCHED RACK PDU CONFIGURATION

Compatible with APC AP7922

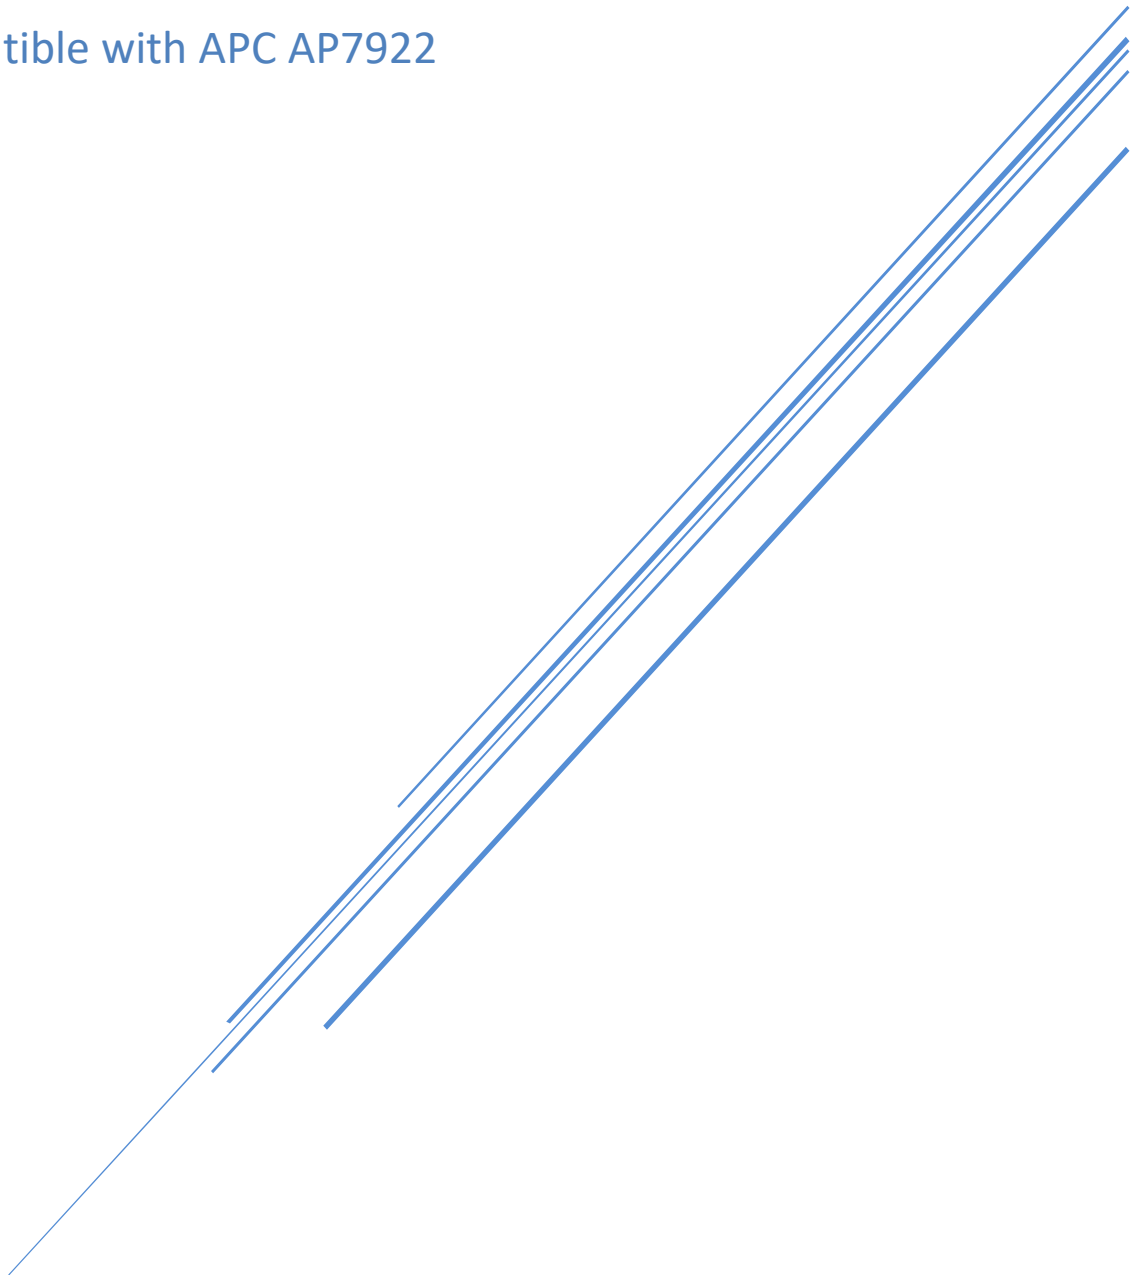


Prepared by  
Tan Sze Yan / Tracy Tan

## Contents


CONSOLE CONFIGURATION .....	2
NETWORK CONFIGURATION.....	3
HINTS.....	4

## CONSOLE CONFIGURATION

- 1) Search Device Manager on Window > Ports (COM & LPT) > USB Serial Port (COM?)

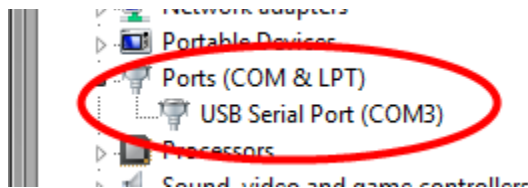

- 2) Open PUTTY > Connection type: Serial > Serial line = COM? > Speed = 9600

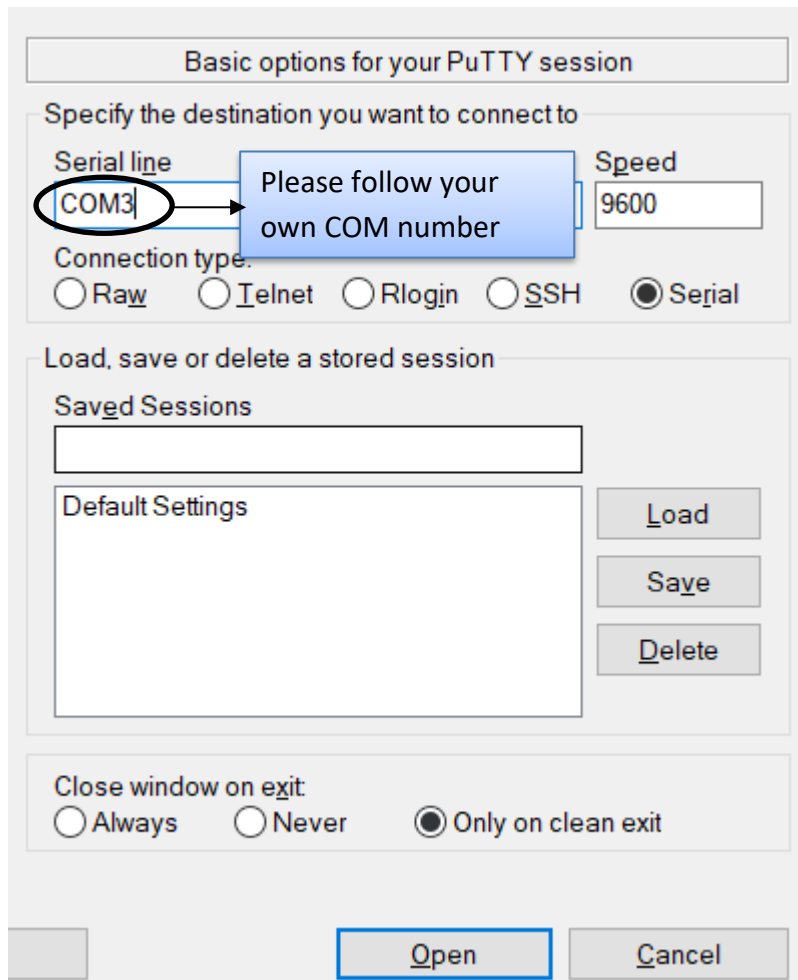

- 3) Login by using default username and password  
Username: apc  
Password: apc

## NETWORK CONFIGURATION

- 1) Type [2] for Network

```
User Name : apc
Password  : ***

American Power Conversion      Network Management Card AOS   v
(c) Copyright 2009 All Rights Reserved Rack PDU APP         v
-----
Name       : RackPDU                      Date : 09/08/2002
Contact    : Unknown                      Time : 20:05:06
Location   : Unknown                      User : Administrator
Up Time    : 0 Days 0 Hours 48 Minutes     Stat : P+ N+ A+

Switched Rack PDU: Communication Established

----- Control Console -----

  1- Device Manager
  2- Network
  3- System
  4- Logout

  <ESC>- Main Menu, <ENTER>- Refresh, <CTRL-L>- Event Log
>
```

- 2) Type [1] for TCP/IP

```
----- Network -----

  1- TCP/IP
  2- DNS
  3- Ping Utility
  4- FTP Server
  5- Telnet/SSH
  6- Web/SSL/TLS
  7- Email
  8- SNMP
  9- Syslog
 10- ISX Protocol

  <ESC>- Back, <ENTER>- Refresh, <CTRL-L>- Event Log
```

- 3) Type [4] for Boot Mode : Manual = for manual configuration

```
----- TCP/IP -----

Network started. Manual settings are in use.
-----
System IP       : 192.168.9.15      MAC Address    : 00 C0 B7 EB A2 85
Subnet Mask     : 255.255.255.0
Default Gateway : 192.168.9.251

Host Name       : APC
Domain Name     : example.com

1- System IP       : 192.168.9.15
2- Subnet Mask     : 255.255.255.0
3- Default Gateway : 192.168.9.251
4- Boot Mode       : Manual
5- Advanced...

  <ESC>- Back, <ENTER>- Refresh, <CTRL-L>- Event Log
```

- 4) Type [4] for Manual

```
----- Boot Mode -----
1- DHCP & BOOTP
2- DHCP only
3- BOOTP only
4- Manual
<ESC>- Back, <ENTER>- Refresh
> 4
```

- 5) Press [1] for System IP

Press [2] for Subnet Mask

Press [3] for Default Gateway

```
----- TCP/IP -----
Network started. Manual settings are in use.
-----
System IP      : 192.168.9.15      MAC Address   : 00 C0 B7 1
Subnet Mask    : 255.255.255.0
Default Gateway : 192.168.9.251

Host Name      : APC
Domain Name    : example.com

1- System IP      : 192.168.9.15
2- Subnet Mask    : 255.255.255.0
3- Default Gateway: 192.168.9.251
4- Boot Mode      : Manual
5- Advanced...

<ESC>- Back, <ENTER>- Refresh, <CTRL-L>- Event Log
```

- 6) Press [CTRL+C] or [ESC] to return back to Main Page > Press [4] for log out > All changes will take effect right after logout

## HINTS

- 1) You can delete the command by press [SHIFT+BACKSPACE]
- 2) You can access the interface through web browser by using IP.
- 3) You can remote access using cmd on window
  - ➔ Open [cmd] run as administrator
  - ➔ Use the following commands: `arp -s IP_ADDRESS MAC_ADDRESS`
  - ➔ Eg: `[arp -s 192.168.9.15 00-C0-B7-EB-A2-85]`
  - ➔ Mac address can be found on the bottom of the PDU and Quality Assurance Slip

